


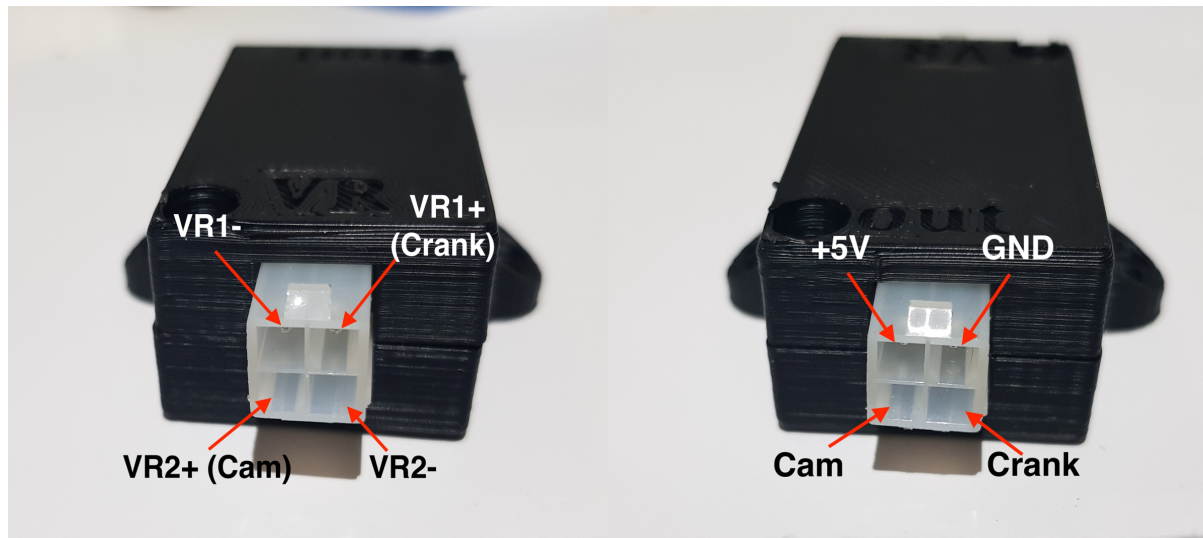

External Dual VR Conditioner.

Need more VR trigger inputs, VR VSS or convert an ABS VR to digital.

Will convert a VR signal to a Digital 5v (HALL) signal and can be feed into a digital input on the ecu.

Can also be used to clean up a Hall Signal, connecting vr1+ Crank and VR2+ Cam from the Hall sensors output, you will need an external 1K pullup resistor from the 5V

Comes as pictured and includes wire end connectors and pins.