



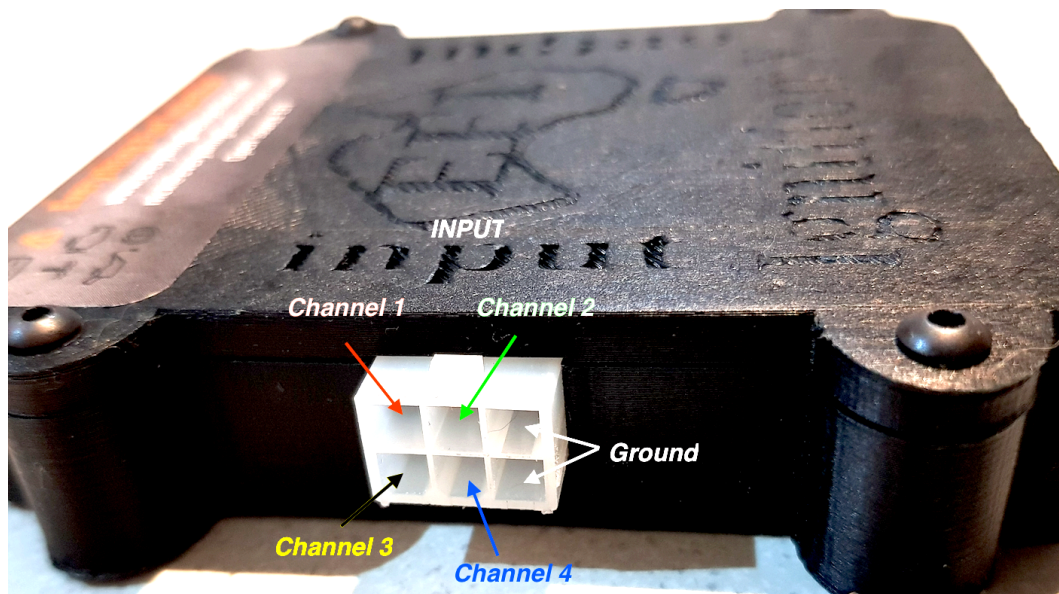

Input

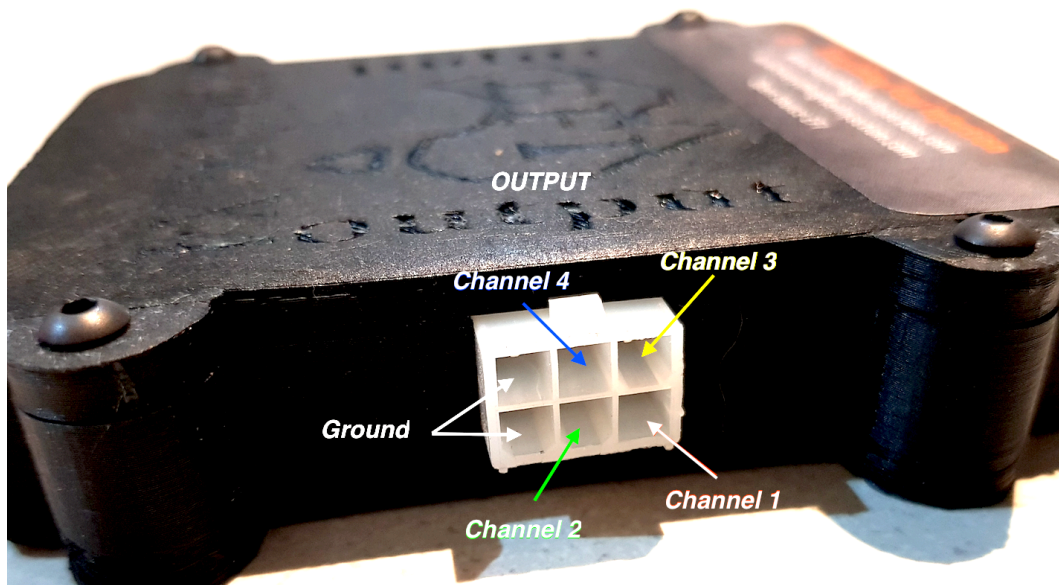

Output

Thank you for purchasing the Ignitor X4

Included is the pinout.

Set the ecu's output to 5 volt.

Connect coils + Positive to 12v power and the - negative side of the coil to the ignitor box.

Please use both sets of grounds, the input grounds need to be grounded at the same point as the ECU, the output grounds are best to the negative battery terminal.

Do not torque down the case screws as they strip easily

Any Help email me at : nick@everythingfuelinjection.com

Speeduino Forum as : NickZ

